Flymo

Electrolux

Micro Compact 300 +

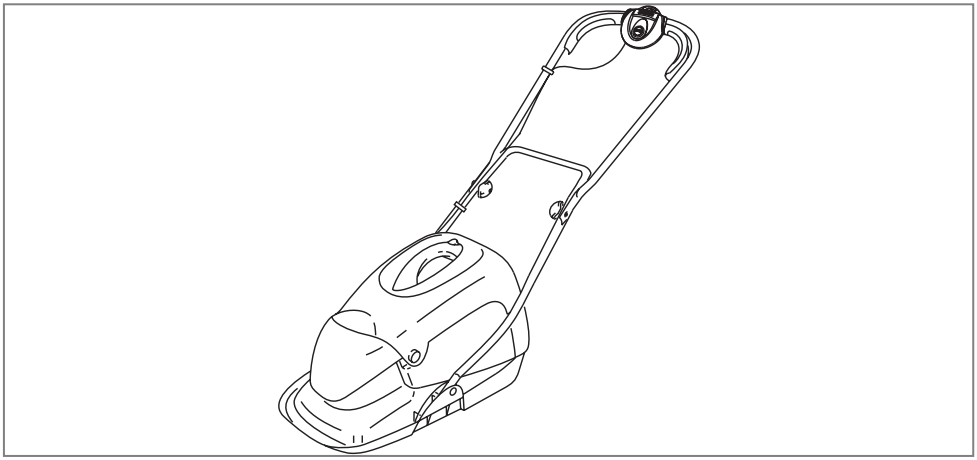

GB	**IMPORTANT INFORMATION** Read before use and retain for future reference
DE	**WICHTIGE INFORMATION** Bitte vor dem Benutzen des Gerätes durchlesen und gut aufbewahren
FR	**RENSEIGNEMENTS IMPORTANTS** A lire avant usage et à conserver pour référence ultérieure
NL	**BELANGRIJKE INFORMATIE** Leest u deze informatie voor het gebruik en bewaar ze voor toekomstige raadpleging
NO	**VIKTIG INFORMASJON** Les bruksanvisningen nøye før bruk og oppbevar den for senere bruk
FI	**TÄRKEÄÄ TIETOA** Lue tämä ennen käyttöä ja säilytä myöhempää tarvetta varten
SE	**VIKTIG INFORMATION** Läs anvisningarna före användningen och spara dem för framtida behov
DK	**VIGTIGE OPLYSNINGER** Du bør læse brugsanvisningen før brug og gemme til senere henvisning
ES	**INFORMACIÓN IMPORTANTE** Léase antes de utilizar y consérvela como referencia en el futuro
PT	**INFORMAÇÕES IMPORTANTES** Leia antes de utilizar e guarde para consulta futura
IT	**INFORMAZIONI IMPORTANTI** Leggere prima dell'uso e conservare per ulteriore consultazione

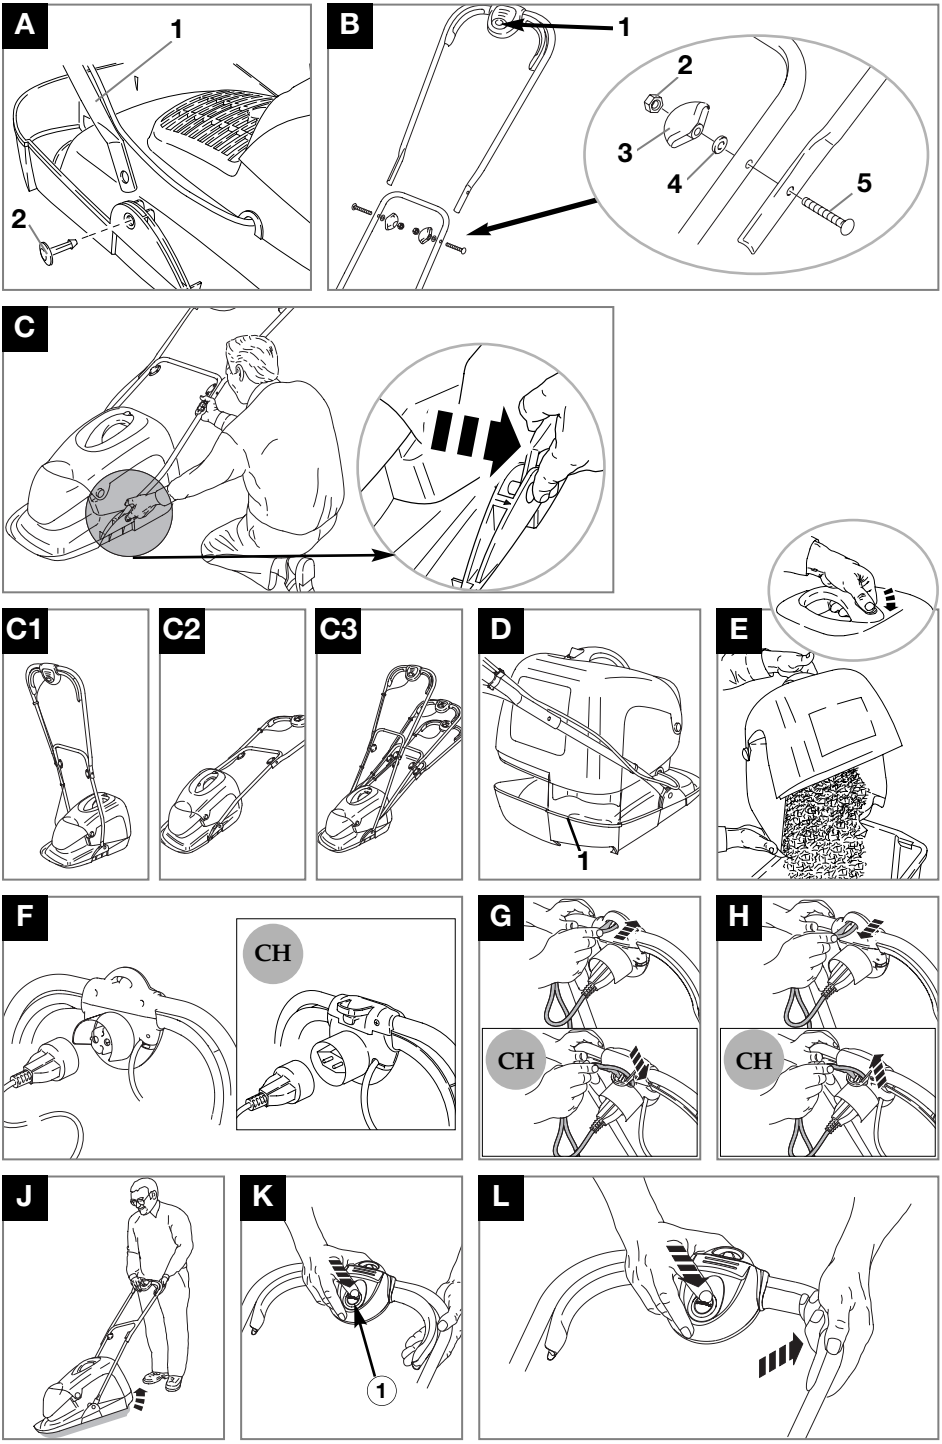
A
1
2
B
1
2
3
4
5
C
C1
C2
C3
D
1
E
F
CH
G
CH
H
CH
J
K
1
L

M

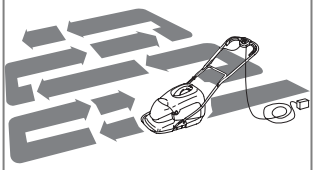

N

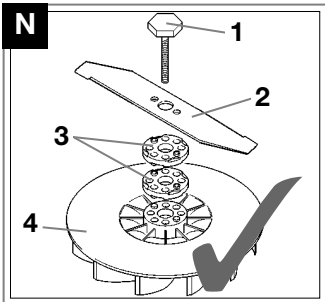

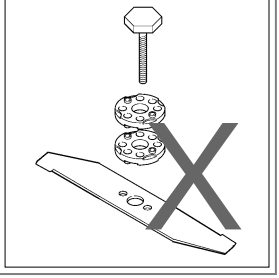

P

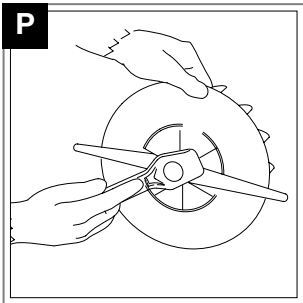

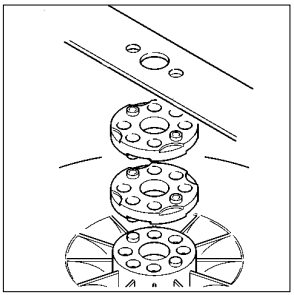

Q

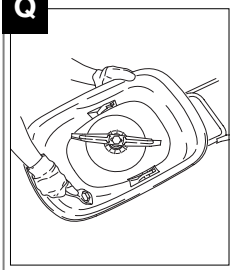

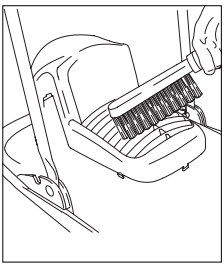

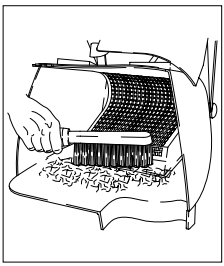

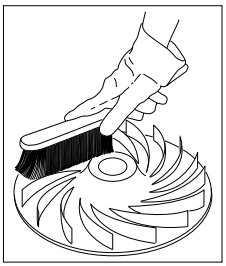

R

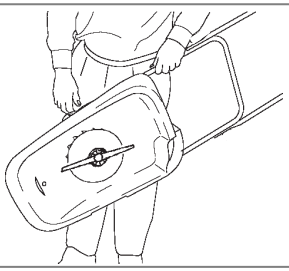

S

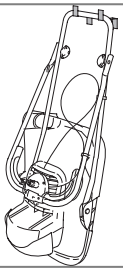

GB - CONTENTS

1. Switchbox
2. Start/stop lever
3. Upper handle
4. Cable clip
5. Bolt
6. Washer
7. Handle knob
8. Nut (if applicable)
9. Lower handle
10. Grassbox
11. Fixing Pin
12. Hood
13. Spanner/scraper tool
14. Cutting height spacers (1 fitted to lawnmower & 2 in loose parts pack)
15. Instruction Manual
16. Warning Label
17. Product Rating Label

DE - INHALT

1. Schalterkasten
2. Start-/Stopphebel
3. Oberer Griff
4. Kabelhalter
5. Bolzen
6. Unterlegscheibe
7. Griffknopf
8. Mutter (falls vorhanden)
9. Unterer Griff
10. Grasbehälter
11. Paßstift
12. Haube
13. Schraubenschlüssel/ Reinigungswerkzeug
14. Schnitthöhen-Distanzscheiben (1 befindet sich am Rasenmäher & 2 werden lose in einem Beutel geliefert)
15. Bedienungsanweisung
16. Warnetikett
17. Produkttypenschild

FR - TABLE DES MATIÈRES

1. Boîtier de commande.
2. Levier de démarrage/arrêt
3. Guidon supérieur
4. Attache câble
5. Boulons
6. Rondelles
7. Bouton de Guidon
8. Ecrou (si applicable)
9. Guidon inférieur
10. Bac de ramassage
11. Chevilles de fixation
12. Capot
13. Clé/outil de grattage
14. Rondelles de réglage de la hauteur de coupe (1 rondelle montée à la tondeuse & 2 livrées en pièces détachées)
15. Manuel d'Instructions
16. Etiquette d'avertissement
17. Plaquette des Caractéristiques du Produit

NL - INHOUD

1. Schakeldoos
2. Start/stop-hendel
3. Bovenstuk van duwboom
4. Snoerklem
5. Bout
6. Pakkingring
7. Knop voor duwboom
8. Moer (indien van toepassing)
9. Onderstuk van duwboom
10. Grasbak
11. Bevestigingspin
12. Kap
13. Moersleutel/ schraapinstrument
14. Afstandhouder voor maaihoogte(1 op maaimachine & 2 in onderdelenzak)
15. Handleiding
16. Waarschuwingsetiket
17. Product-informatielabel

NO - INNHOLD

1. Bryterboks
2. Start/stoppspak
3. Øvre håndtak
4. Kabelklemme (kabelsko)
5. Bolt
6. Skive (pakning)
7. Vingemutter
8. Mutter (om relevant)
9. Nedre håndtak
10. Gressbeholder
11. Festepinne
12. Hette
13. Skrunøkkel/ Skrapeinnretning
14. Klippehøyde avstandsstykker (1 montert på gressklipperen & 2 i pakken med løse deler)
15. Bruksanvisning
16. Advarselsetikett
17. Produktmerking

FI - SISÄLTÖ

1. Kytkinrasia
2. Käynnistyskahva
3. Ylempi kahva
4. Johdon pidike
5. Pultti
6. Tiivistysrengas
7. Kahvan nuppi
8. Mutteri (jos käytössä)
9. Alempi kahva
10. Ruoholaatikko
11. Kiinnitystappi
12. Suojus
13. Ruuviavain/kaavin
14. Leikkauskorkeuden välilevyt (1 kiinnitetty ruohonleikkuriin & 2 irtonaista varustepakkauksessa)
15. Käyttöopas
16. Varoitusnimike
17. Ruohonleikkurin arvokilpi

SE - INNEHÅLL

1. Kopplingsdosa
2. Start/stopp-reglage
3. Övre handtag
4. Kabelklämma
5. Bult
6. Bricka
7. Knopp för handtag
8. Mutter (om sådan är monterad)
9. Undre handtag
10. Gräslåda
11. Fästbult
12. Kåpa
13. Skruvnyckel/ Avskrapare
14. Distansbrickor för klippningshöjd
15. Bruksanvisning
16. Varningsetikett
17. Produktmärkning

DK - INDHOLD

1. Afbryderkontakt
2. Start/stophåndtag
3. Øvre håndtag
4. Kabelklemme
5. Bolt
6. Spændeskive
7. Håndtagsknop
8. Møtrik (hvis relevant)
9. Nedre håndtag
10. Græsopsamleren
11. Håndtagsstift
12. Skjold
13. Skruenøgle/ skrabeværktøj
14. Afstandsskiver til indstilling af klippehøjde (1 monteret på plæneklipperen og 2 løse i posen)
15. Brugsvejledning
16. Advarselsmœrkat
17. Produktets mærkeskilt

ES - CONTENIDO

1. Caja de conmutador
2. Palanca de arranque/parada
3. Empuñadura superior
4. Grapa de cable
5. Perno
6. Arandela
7. Manija de empuñadura
8. Tuerca (si fuera aplicable)
9. Empuñadura inferior
10. Recipiente para la hierba
11. Pasador de fijación
12. Capucha
13. Herramienta/raspador
14. Espaciadores reductores de altura (1 montado en la cortadora y 2 sueltas en el paquete de piezas)
15. Manual de instrucciones
16. Etiqueta de Advertencia
17. Placa de Características del Producto

PT - LEGENDA

1. Caixa de distribuição
2. Barra para começar/parar
3. Guiador superior
4. Grampo do cabo
5. Cavilha
6. Anilha
7. Maçaneta
8. Porca (se aplicável)
9. Guiador inferior
10. Caixa para a relva
11. Parafuso
12. Cobertura do motor
13. Chave de fendas
14. Separadores para a altura do corte(1 instalado na máquina & 2 no pacote das peças soltas)
15. Manual de Instrucções
16. Etiqueta de Aviso
17. Rótulo de Avaliação do Produto

IT - NOMENCLATURA

1. Cassetta dell'interruttore
2. Leva di avviamento
3. Impugnatura superiore
4. Morsetto per il cavo
5. Bullone
6. Rondella
7. Manopola dell'impugnatura
8. Dado (se pertinente)
9. Impugnatura inferiore
10. Canestro raccoglierba
11. Perno di fissaggio
12. Calotta di protezione
13. Chiave/raschietto
14. Distanziatori per l'altezza dell'elemento falciante (1 montato sul tosaerba e 2 di ricambio)
15. Manuale di istruzioni
16. Etichetta di pericolo
17. Etichetta dati del prodotto

(**GB**)	CARTON CONTENTS	(**NO**)	KARTONGEN INNHOLDER	(**ES**)	CONTENIDO DEL CARTON
(**DE**)	KARTONINHALT	(**FI**)	PAKETIN SISÄLTÖ	(**PT**)	LEGENDAS DOS DESENHOS
(**FR**)	CONTENU DU CARTON	(**SE**)	FÖRPACKNINGENS INNEHÅLL	(**IT**)	CONTENUTO DEL CARTONE
(**NL**)	INHOUD	(**DK**)	KARTONINDHOLD		

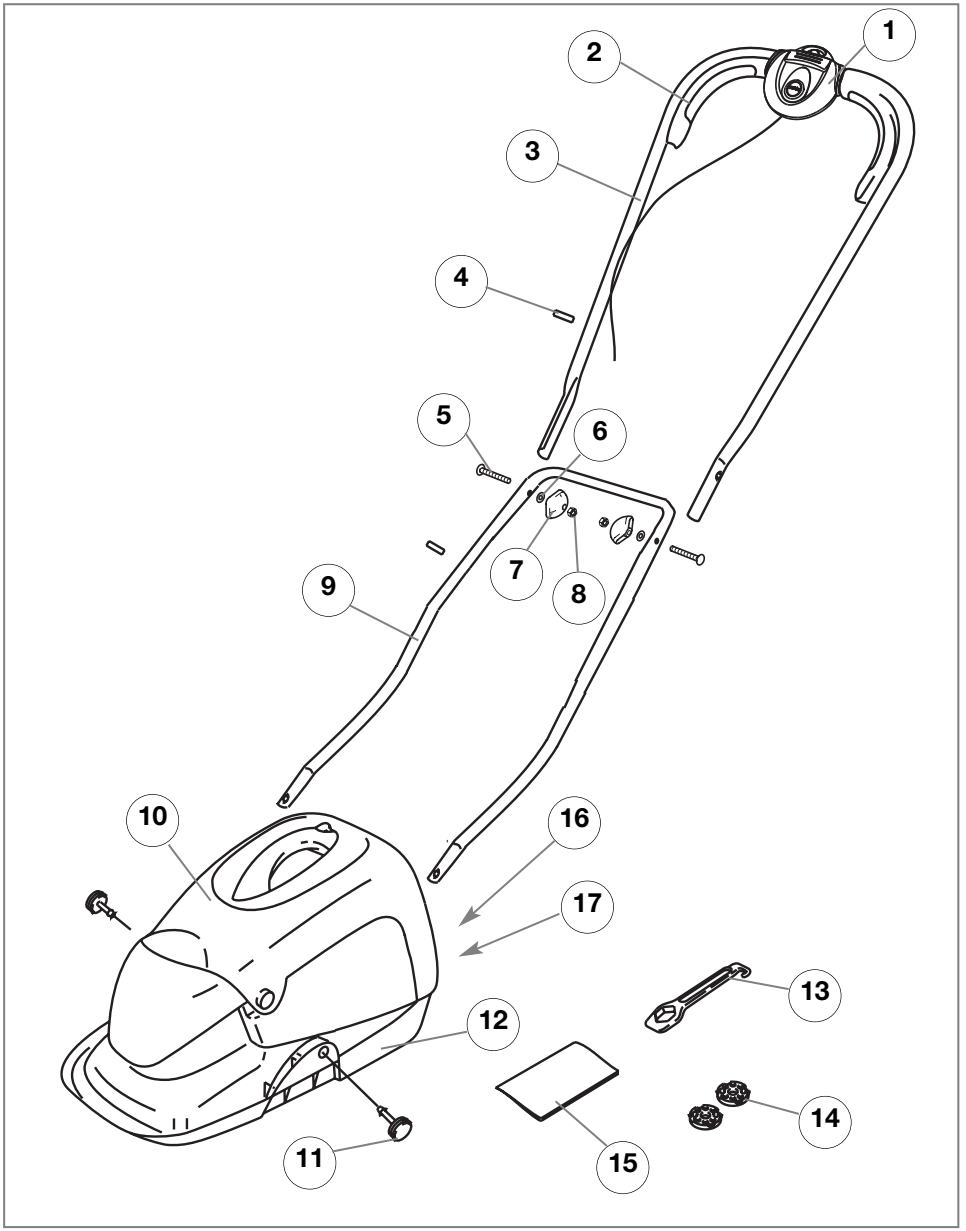

Safety Precautions

If not used properly this lawnmower can be dangerous! This lawnmower can cause serious injury to the operator and others, the warnings and safety instructions must be followed to ensure reasonable safety and efficiency in using this lawnmower. The operator is responsible for following the warning and safety instructions in this manual and on the lawnmower. Never use the mower unless the grassbox or guards provided by the manufacturer are in the correct position.

Explanation of Symbols on the Micro Compact

Warning

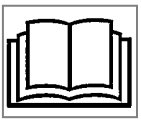

Read the user instructions carefully to make sure you understand all the controls and what they do.

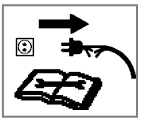

Switch off! Remove plug from mains before adjusting, cleaning or if cable is entangled or damaged. Keep the cable away from the blade.

Always keep the lawnmower on the ground when mowing. Tilting or lifting the lawnmower may cause stones to be thrown out

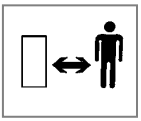

Keep bystanders away. Do not mow whilst people especially children or pets are in the mowing area

Beware of severing toes or hands. Do not put hands or feet near a rotating blade.

Blade continues to rotate after the machine is switched off.
Wait until all machine components have completely stopped before touching them.

Do not mow in the rain or leave the lawnmower outdoors while raining

General

1. Never allow children or people unfamiliar with these instructions to use the mower. Local regulations may restrict the age of the operator.
2. Only use the lawnmower in the manner and for the functions described in these instructions.
3. Never operate the lawnmower when you are tired, ill or under the influence of alcohol, drugs or medicine.
4. The operator or user is responsible for accidents or hazards occurring to other people or their property.

Electrical

1. The use of a Residual Current Device (R.C.D.) with a tripping current of not more than 30mA is recommended. Even with a R.C.D. installed 100% safety cannot be guaranteed and safe working practice must be followed at all times. Check your R.C.D. every time you use it.
2. Before use, examine cable for damage, replace it if there are signs of damage or ageing.
3. Do not use the lawnmower if the electric cables are damaged or worn
4. Immediately disconnect from the mains electricity supply if the cable is cut, or the insulation is damaged. Do not touch the electric cable until the electrical supply has been disconnected. Do not repair a cut or damaged cable. Replace it with a new one.
5. Your extension cable must be uncoiled, coiled cables can overheat and reduce the efficiency of your mower.
6. Keep cable away from lawnmower, always work away from the power point mowing up and down, never in circles.
7. Do not pull cable around sharp objects.
8. Always switch off at the mains before disconnecting any plug, cable connector or extension cable.
9. Switch off, remove plug from mains and examine electric supply cable for damage or ageing **before** winding cable for storage. Do not repair a damaged cable, replace it with a new one. Use only Flymo replacement cable.
10. Always wind cable carefully, avoiding kinking.
11. Never carry the product by the cable.
12. Never pull on the cable to disconnect any of the plugs.
13. Use only on AC mains supply voltage shown on the product rating label.
14. Flymo products are double insulated to EN60335. Under no circumstance should an earth be connected to any part of the product.

Safety Precautions

Cables

Use only 1.00mm² size cable up to 30 metres length maximum.

Maximum rating:

1.00mm² size cable 10 amps 250 volts AC

1. Mains cables and extensions are available from your local Electrolux Outdoor Products Approved Service Centre.
2. Only use extension cables specifically designed for outdoor use.

Preparation

1. While using your product always wear substantial footwear and long trousers.
2. Make sure the lawn is clear of sticks, stones, bones, wire and debris; they could be thrown by the blade.
3. Before using the machine and after any impact, check for signs of wear or damage and repair as necessary.
4. Replace worn or damaged blades together with their fixings in sets to preserve balance.

Use

1. Use the lawnmower only in daylight or good artificial light.
2. Avoid operating your lawnmower in wet grass, where feasible.
3. Take care in wet grass, you may lose your footing.
4. On slopes, be extra careful of your footing and wear non-slip footwear.
5. Mow across the face of slopes, never up and down.
6. Exercise extreme caution when changing direction on slopes. Walk never run.
7. Mowing on banks and slopes can be dangerous. Do not mow on **banks** or **steep** slopes.
8. Do not walk backwards when mowing, you could trip.
9. Never cut grass by pulling the mower towards you.
10. Switch off before pushing the mower over surfaces other than grass.
11. Never operate the lawnmower with damaged guards or without guards in place.
12. Keep hands and feet away from the cutting means at all times and especially when switching on the motor.
13. Do not tilt lawnmower when the motor is running, except when starting and stopping. In this case, do not tilt more than absolutely necessary and lift only the part which is away from the operator. Always ensure that both hands are in the operating position before returning the appliance to the ground.
14. Never pick up or carry a mower when it is operating or still connected to the mains supply.
15. Remove the plug from the mains :

- before leaving the mower unattended for any period;
- before clearing a blockage;
- before checking, cleaning or working on the appliance;
- if you hit an object. Do not use your lawnmower until you are sure that the entire lawnmower is in a safe operating condition.;
- if the lawnmower starts to vibrate abnormally. Check immediately. Excessive vibration can cause injury

Maintenance and storage

1. Keep all nuts, bolts and screws tight to be sure the lawnmower is in safe working condition.
2. Check the grassbox/grassbag frequently for wear or deterioration
3. Replace worn or damaged parts for safety.
4. Only use the replacement blade, blade bolt, spacer and impeller specified for this product.
5. Be careful during adjustment of the lawnmower to prevent entrapment of the fingers between moving blades and fixed parts of the machine.

Assembly Instructions

A1 - Lower handle
A2 - Fixing pin
Fitting the Lower Handles to Your Lawnmower (A)

1. Place the end of the lower handle into the slots.
2. Secure lower handles to hood by firmly pushing fixing pin through holes in hood and handle.
3. Repeat on the other side.

- **NOTE**
  Should a problem occur when securing handle to hood with the fixing pin, carefully lever fixing pin out of location and repeat steps 1 to 3 above.

B1 - lock-off button
B2 - Nut (if applicable)
B3 - Handle knob
B4 - Washer
B5 - Bolt
Fitting Upper Handles to Lower Handles (B)

1. Ensure the upper handle is located correctly with the lock-off button on the switchbox uppermost.
2. Ensure the upper handle and the lower handle are aligned correctly.
3. Insert the nut into the handle knob. (if applicable)
4. Fit the bolts, washers and handle knobs.
5. Fit the cable to the handles with the clips provided. Make sure the cable is not trapped between the upper and lower handles.

Handle Adjsutment

- **WARNING! STOP THE LAWNMOWER AND WAIT UNTIL THE BLADE HAS STOPPED ROTATING BEFORE ADJUSTING THE HANDLE.**
- **NOTE! REMOVAL OF LOWER HANDLE FIXING PINS IS NOT REQUIRED TO ADJUST THE HANDLE**

TO ADJUST THE HANDLE (C)

1. Hold handle as illustrated.
2. Take the weight of the handle with your right hand...
3. ...then grip the lower part of the handle with your left hand...
4. ...and **pull** the lower handle towards you with your left hand.
5. Move to forward or down position as required.

HANDLE IN FORWARD POSITION (C1)

Follow procedure described in "TO ADJUST THE HANDLE" and push handle forward until it stops.

HANDLE IN DOWN POSITION (C2)

Follow procedure described in "TO ADJUST THE HANDLE" and move handle downward until it stops.. **NOTE** - **The handle does not rest flat on the ground.**

HANDLE IN OPERATING POSITION (C3)

Adjustment is not required to move the handle to the operating position

Simply pull down from the forward position **or** lift up from the down position until the handle is in the most comfortable operating position.

Grassbox

D1 - Lip on the hood

Fitting the grassbox

- IMPORTANT!
  Before using your lawnmower - make sure the grassbox is securely located inside the lip on the hood indicated in figure **D**.

Removing and Emptying the grassbox

- Stop the lawnmower and wait until the blade has stopped rotating BEFORE removing the grassbox.

1. Hold the grassbox by the moulded handle recess and support grassbox base with the other hand.
2. Move grassbox to emptying site and press release button to open grassbox as in figure **E**.
3. Ensure the grassbox is clean BEFORE closing and refitting the grassbox.

- **The grassbox should be in the closed position prior to fitting.**

Starting and Stopping

To Start your Lawnmower

The Micro Compact uses an advanced belt drive system, between the motor and the blade which improves cutting power and flotation in all conditions. Due to the high turning force (Torque) which this motor develops a light squeak may be heard when the machine is started, this is quite normal and will not effect the performance of the product.

1. Connect female extension cable connector to the back of the switchbox. **(F)**
2. Form loop in mains cable and push the loop through the slot as illustrated in picture **(G)**
3. To secure, position loop over the hook and pull the cable back through the slot as illustrated in picture **(H)**.
4. Connect plug to mains and switch on.
5. Move handle to the mowing position. **See Fig. C3**.
6. To prevent a ring being cut in your lawn and to clear any residual grass in the collection chute, tilt your lawnmower slightly **(J)**.

The switchbox is provided with a lock-off button (K1) to prevent accidental starting.

7. Press and hold the lock-off button **(K)** on the switchbox, then squeeze one of the Start/Stop levers towards the upper handle **(L)**.
8. Continue to squeeze the start/stop lever towards the upper handle and release the lock-off button.
9. When the lawnmower has reached full speed gently lower it onto the lawn.

- **NOTE**
  There are two start/stop levers fitted. Either one can be used for starting the lawnmower.
- **IMPORTANT**
  Do not use the start/stop levers intermittently

To Stop your Lawnmower

1. To prevent a ring being cut in your lawn and to clear any residual grass in the collection chute, tilt your lawnmower slightly **(J)**.
2. Release the pressure on the Start/Stop lever.

How to Mow

1. Start mowing the edge of the lawn nearest to the power point so the cable is laid out on the lawn you have already cut. (**M**)
2. Cut your grass twice a week during the growing season, your lawn will suffer if more than a third of its length is cut at one time.
   Do Not Overload Your Mower

Mowing long thick grass may cause the motor speed to drop, you will hear a change in the motor sound. If the motor speed drops you may overload your lawnmower which may cause damage. When mowing in long thick grass a first cut with the cutting height set higher will help reduce the load. See Adjusting the Cutting Height.

How to Mow cont...

Remember : for best grass collection, always mow in a straight line, do not swing the lawnmower from side to side

Note : If a trail of grass is left by your lawnmower this indicates that your cutting height needs to be raised or the grassbox is full. If the grassbox is full, empty is as described in "Removing and emptying the grassbox". Fit the grassbox, start the lawnmower and mow over the grass trail to collect any residual grass.

Adjusting the Cutting Height

N1 - Blade bolt
N2 - Blade
N3 - Cutting height spacers (MAXIMUM 3)
N4 - Fan

- **Always handle the blade with care - sharp edges could cause injury.**
- **USE GLOVES.**
- **Never use more than 3 Cutting Height Spacers.**
- **Spacers must only be fitted between the blade and the fan and NEVER between the blade and the bolt.**

1. Remove the blade bolt, and blade as described in **Removing the Blade and Fan.**
2. **For a Lower Cut** - Add spacers to a maximum of 3.**(N)**
3. **For a Higher Cut** - Take spacers away.
4. Refit the blade as described in **Fitting the Blade and Fan.**

Removing the Blade and Fan

1. To remove the blade bolt, hold the fan firmly and with the spanner provided loosen the blade bolt by turning it anti-clockwise **(P)**.
2. Remove the blade bolt, blade, spacers, fan and insert.**(P)**
3. Inspect for damage and clean as necessary.

- **Renew your metal blade after 50 hours mowing or 2 years whichever is the sooner - regardless of condition.**

Fitting the Blade and Fan

- **If the blade is cracked or damaged replace it with a new one.**
- **Never use a blade bolt if the insulated head is damaged cracked or missing.**

1. Ensure the insert and fan are located correctly.**(P)**
2. Place the spacers onto the fan ensuring the peg have located into the holes.**(P)**
3. Place the blade onto the spacers ensuring the pegs have located into the holes on the blade and ensuring the blade is positioned as illustrated in **Figure P**.
4. Place the blade bolt through the centre hole of the blade.**(P)**
5. Tighten down clockwise by hand.
6. Hold the fan firmly and tighten the blade bolt with the spanner provided. **(P)**

Caring for your Lawnmower

Cleaning (Q) - USE GLOVES

IMPORTANT: It is very important that you keep your lawnmower clean. Grass clippings left in any of the air intakes or under the hood could become a potential fire hazard.

1. Remove grass from under the hood with a piece of wood or similar.
2. Using a soft brush - remove grass clippings from all air intakes and the grassbox.
3. Remove the blade, **see Figure P**, to gain access to the fan and clean with a soft brush.
4. Wipe over the surface of your lawnmower with a dry cloth.

IMPORTANT: Never use water for cleaning your lawnmower. Do not clean with chemicals, including petrol, or solvents - some can destroy critical plastic parts.

At the End of the Mowing Season

1. Replace blade, bolts, nuts or screws, if necessary.
2. Clean your lawnmower thoroughly.
3. Ask your local Service Centre to clean the air filter thoroughly and carry out any service or repairs required.
4. Make sure that the electric cable is coiled properly.

Carrying your Lawnmower (R)

Hold as illustrated in Figure R. Ensure the blade is facing away from you.

Storing your Lawnmower (S)

Store in a dry place where your lawnmower is protected from damage.

Service Recommendations

- **Your product is uniquely identified by a silver and black product rating label.**
- **We strongly recommend that your product is serviced at least every twelve months, more often in a professional application.**

Fault Finding Hints

Fails to Operate

1. Is the Power Turned On?
2. Check the fuse in the plug, if blown replace.
3. Fuse continues to blow?
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Poor Flotation

1. Disconnect from the mains electricity supply.
2. Clean the underside of the hood and the fan blades.
3. Raise to a higher height of cut. See Adjusting the Height of Cut.
4. If poor flotation persists?
   Disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Poor Collection

1. Is the grassbox fitted correctly?
2. Are you mowing in straight lines?
3. Are you cutting more than one third of the grass length?
4. Do you need to raise the cutting height?
5. Follow the procedure described in "Poor Flotation".

Excessive Vibration

1. Disconnect from the mains electricity supply.
2. Check that the blade is fitted correctly?
3. If the blade is damaged or worn, replace it with a new one.
4. If vibration persists?
   Immediately disconnect from the mains electricity supply and consult your local approved Electrolux Outdoor Products Service Centre.

Environmental Information

Electrolux Outdoor Products are manufactured under an Environmental Management System (ISO 14001) using, where practical, components manufactured in the most environmentally responsible manner, according to company procedures, and with the potential for recycling at the end of the products' life.

- Packaging is recyclable and plastic components have been labelled (where practical) for categorised recycling.
- Awareness of the environment must be considered when disposing of 'end-of-life' product.
- If necessary, contact your local authority for disposal information.

Guarantee and Guarantee Policy

If any part is found to be defective due to faulty manufacture within the guarantee period, Electrolux Outdoor Products, through its Authorised Service Repairers will effect the repair or replacement to the customer free of charge providing:

(a) The fault is reported directly to the Authorised Repairer.
(b) Proof of purchase is provided.
(c) The fault is not caused by misuse, neglect or faulty adjustment by the user.
(d) The failure has not occurred through fair wear and tear.
(e) The machine has not been serviced or repaired, taken apart or tampered with by any person not authorised by Electrolux Outdoor Products.
(f) The machine has not been used for hire.
(g) The machine is owned by the original purchaser.
(h) The machine has not been used outside of the country for which it was specified.
(i) The machine has not been used commercially.

* This guarantee is additional to, and in no way diminishes the customers statutory rights.

Failures due to the following are not covered, therefore it is important that you read the instructions contained in this Operator's Manual and understand how to operate and maintain your machine:

Failures not covered by guarantee

* Replacing worn or damaged blades.
* Failures as a result of not reporting an initial fault.
* Failures as a result of sudden impact.
* Failures as a result of not using the product in accordance with the instructions and recommendations contained in this Operator's Manual.
* Machines used for hire are not covered by this guarantee.
* The following items listed are considered as wearing parts and their life is dependent on regular maintenance and are, therefore not normally subject to a valid warranty claim: Blades, Electric Mains cable.
* **Caution!**
  Electrolux Outdoor Products does not accept liability under the warranty for defects caused in whole or part, directly or indirectly by the fitting of replacement parts or additional parts that are not either manufactured or approved by Electrolux Outdoor Products, or by the machine having been modified in any way.

BELGIQUE/BELGIË	**Flymo Belgique/België** **Tel: 02 363 0311, Fax: 02 363 0391**
ČESKÁ REPUBLIKA	**Electrolux, spol. s.r.o., oz Electrolux Outdoor Products,** **Na Křečku 365, Praha 10 - Horní Měcholupy.** **Tel: 02/7847 0164, Info-linka: 0800/110 220** **Internet: www.partner-flymo.cz E-mail: info@husqvarna.cz**
DANMARK	**Electrolux Outdoor Products, Flymo/Partner A/S,** **Lundtoftegaardsvej 93A, DK 2800 Kgs.Lyngby** **Tel: 45 87 75 77, Fax: 45 93 33 08, www.flymo-partner.dk**
DEUTSCHLAND	**Flymo Deutschland** **Tel: 097 21 7640, Fax:097 21 764202**
ESTONIA	**Electrolux Estonia Ltd (Electrolux Eesti AS)** **Tel: (372) 6650010**
FRANCE	**Flymo France SNC** **Tel 01 46 67 8141, Fax 01 43 34 2491**
FINLAND SUOMI	**Electrolux Outdoor Products Finland** **Tel: 00 358 9 39611, Fax: 00 358 9 3961 2644**
ITALIA	**McCulloch Italiana s.r.l. - Via Como 72, 23868 Valmadrera** **(LECCO) - ITALIA** **Tel: 800 017829, Fax: 0341 581671**
IRELAND	**Flymo Ireland** **Tel: 01 4565222, Fax: 01 4568551**
MAGYARORSZÁG	**Electrolux Lehel Kft** **Tel: 00 36 1 251 41 47**
NORGE	**Flymo/Partner, div. av Electrolux Motor a.s.** **Tel: 69 10 47 90**
NEDERLAND	**Flymo Nederland** **Tel: 0172-468322, Fax: 0172-468219**
ÖSTERREICH	**Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,** **Tel: 0732 770101-0, Fax: 0732 770101-40,** **email: office@husqvarna.co.at Internet: www.husqvarna.at**
POLSKA	**Electrolux Poland Sp. z.o.o. Husqvarna, 01-612 Warszawa** **Myslowicka 10/2** **Tel:- (22) 8332949**
SLOVENIJA	**Husqvarna-Ges.m.b.H. Nfg. KG, Industriezeile 36, 4010 LINZ,** **Tel: 0732 770101-0, Fax: 0732 770101-40,** **email: office@husqvarna.co.at Internet: www.husqvarna.at**
SLOVENSKA	**Electrolux Slovakia s.r.o., Borova Sihot 211, 033 01 Lipt. Hradok** **Tel: 044 522 14 19, Fax: 044 522 14 18, www.flymo-partner.sk**
SCHWEIZ/SUISSE/SUIZZERA	**Flymo Schweiz/Suisse/Suizzera** **Tel 062 889 93 50 / 889 94 25, Fax 062 889 93 60 / 889 94 35**
SVERIGE	**Electrolux Outdoor Products, Sverige** **Tel: 036 – 14 67 00, Fax: 036 – 14 60 70**
UNITED KINGDOM	**Electrolux Outdoor Products United Kingdom** **Tel: 01325 300303, Fax: 01325 310339**

Electrolux Outdoor Products
Aycliffe Industrial Park
NEWTON AYCLIFFE
Co.Durham DL5 6UP
ENGLAND

Telephone - (00) 44 1325 300303 Fax - (00) 44 1325 310339

UK Telephone - 01325 300303 Fax - 01325 310339

Our policy of continuous improvement means that the specification of products may be altered from time to time without prior notice. Electrolux Outdoor Products manufacture products for a number of well known brands under various registered patents, designs and trademarks in several countries.

© Electrolux Outdoor Products Ltd. Registered Office, Electrolux Works, Oakley Road, Luton LU4 9QQ
Registered number 974979 England

The Electrolux Group. *The world's No.1 choice.*

The Electrolux Group is the world's largest producer of powered appliances for kitchen, cleaning and outdoor use. More than 55 million Electrolux Group products (such as refrigerators, cookers, washing machines, vacuum cleaners, chain saws and lawn mowers) are sold each year to a value of approx. USD 14 billion in more than 150 countries around the world.

5118146-05